



**Fronius Galvo:
Explanation of symbols and choice
of location
Notes regarding installation and
connection**

EN
Installations instructions
Grid-connected inverter



42,0426,0171,EN 013-04042019

Contents

Explanation of symbols	5
Explanation of safety notices	5
Explanation of symbols - choice of location	5
Explanation of symbols - installation position	7
Choice of location	9
Proper use/intended purpose.....	9
General comments regarding choice of location.....	9
Installation notes	10
Selecting wall plugs and screws	10
Recommended screws	10
Fitting the wall bracket	10
Mounting the inverter on a mast	10
Notes regarding grid connection	11
Monitoring the grid	11
AC terminals	11
Type of AC cable	11
Preparing the aluminium cables for connection.....	11
Grid connection of inverter or dummy device	12
Maximum fuse rating on alternating current side	13
Notes regarding DC connection.....	14
General information about solar modules	14
DC terminals	14
Connecting aluminium cables	15
Notes regarding dummy devices	15
Inverter DC connection	15
Notes regarding the solar module ground in the inverter.....	17
General remarks	17
Solar Module Ground at Negative Pole with Fuse.....	17
Configuring the inverter for grounded solar modules.....	18
Notes regarding the laying of data communication cables	19
Laying data communication cables.....	19
Notes regarding attaching the inverter to the wall bracket.....	20
Attaching the inverter to the wall bracket.....	20
Notes regarding software updates	21
Notes regarding software updates	21
USB Stick as a Data Logger and for Updating Inverter Software	22
USB flash drive as a datalogger	22
Data on the USB stick.....	22
Data volume and storage capacity.....	23
Buffer memory	23
Suitable USB flash drives	24
USB stick for updating the inverter software.....	25
Remove USB stick	25
Notes regarding maintenance.....	26
Maintenance	26
Cleaning.....	26
Serial Number Sticker for Customer Use	27
Serial number sticker for customer use	27

Explanation of symbols

Explanation of safety notices

 **DANGER!**

Indicates immediate danger.

- ▶ If not avoided, death or serious injury will result.

 **WARNING!**

Indicates a potentially hazardous situation.

- ▶ If not avoided, death or serious injury may result.

 **CAUTION!**

Indicates a situation where damage or injury could occur.

- ▶ If not avoided, minor injury and/or damage to property may result.

NOTE!

Indicates a risk of flawed results and possible damage to the equipment.


IMPORTANT!

Indicates tips for correct operation and other particularly useful information.


This does not indicate a potentially hazardous situation.

If you see any of the symbols depicted in the "Safety rules" chapter, special care is required.

Explanation of symbols - choice of location

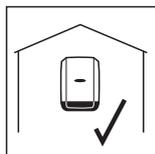

The inverter is suitable for installation indoors.


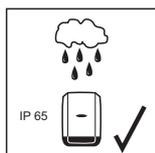


The inverter is suitable for installation outdoors.


Its IP 65 degree of protection means that the inverter is resistant to water jets from any direction and can also be used in damp environments.



In order to minimise the heating up of the inverter, do not expose it to direct insolation. Install the inverter in a protected location, e.g. in the vicinity of the solar modules or beneath the eaves.

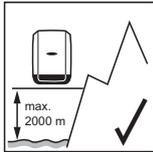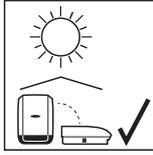

Can be used at altitudes of up to 2000 m

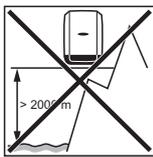

IMPORTANT! The inverter must not be installed or used at altitudes above 2000 m.



Do not install the inverter in:

- areas where ammonia, corrosive vapours, acids or salts are present (e.g. fertiliser stores, ventilation openings from cattle sheds, chemical plants, tanneries, etc.)




As the inverter generates low levels of noise under certain operating conditions, it should not be installed close to living areas.



Do not install the inverter in:

- places where there is an increased risk of damage from farm animals (horses, cattle, sheep, pigs, etc.)
- stables or adjoining areas
- storage areas for hay, straw, chaff, animal feed, fertilisers, etc.

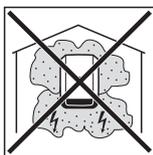

All inverters are designed to be dust-tight. However, in areas with a heavy build-up of dust, the thermal efficiency may still be impaired by dust forming on the cooling surfaces. Regular cleaning is necessary in such situations. It is therefore not recommended to mount the device in rooms or areas in which a heavy build-up of dust is expected.



Do not install the inverter in:

- greenhouses
- storage or processing areas for fruit, vegetables or wine-growing products
- places used to prepare grain, green fodder or animal feeds

Explanation of symbols - installation position



The inverter is designed to be installed vertically on a vertical wall or pillar.



The inverter is suitable for horizontal installation.



The inverter is suitable for installation on a sloping surface.



Do not install the inverter on a sloping surface with its connection sockets facing upwards.



Do not install the inverter at an angle on a vertical wall or pillar.



Do not install the inverter horizontally on a vertical wall or pillar.



Do not install the inverter on a vertical wall or pillar with its connection sockets facing upwards.



Do not install the inverter such that it overhangs with its connection sockets facing upwards.



Do not install the inverter such that it overhangs with its connection sockets facing downwards.



Do not install the inverter on the ceiling.

Choice of location

Proper use/intended purpose

The inverter is intended exclusively to convert direct current from solar modules into alternating current and to feed this into the public grid.

Utilisation not in accordance with the intended purpose comprises:

- Any use above and beyond this purpose
- Making any modifications to the inverter that have not been expressly approved by Fronius
- the installation of components that are not distributed or expressly approved by Fronius.

Fronius shall not be liable for any damage resulting from such action.
No warranty claims will be entertained.

Proper use also includes:

- Carefully reading and obeying all the instructions and all the safety and danger notices in the Operating Instructions and Installation Instructions
- Performing all stipulated maintenance work
- Installation as specified in the Installation Instructions

When designing the photovoltaic system, ensure that all components are operated within their permitted operating ranges at all times.


Observe all the measures recommended by the solar module manufacturer to ensure that the solar module retains its properties in the long term.

Obey the regulations of the power supply company regarding connection methods and energy fed into the grid.

General comments regarding choice of location

The following criteria should be taken into account when choosing a location for the inverter:

Install only on a solid, non-flammable surface

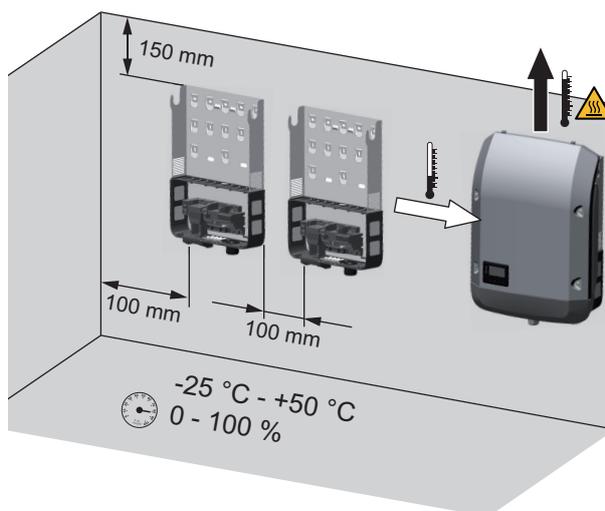

Max. ambient temperatures:
-25 °C / +50 °C

Relative humidity:
0–100%

The airflow within the inverter is from the left to the top (cold air taken in from the left, hot air dissipated out of the top).
The exhaust air can reach a temperature of 70 °C.

The environmental conditions for the inverter must be fulfilled at the installation site.

If the inverter is to be installed on the outer wall of a cattle shed, maintain a minimum all-round clearance of 2 m between the inverter and all ventilation and other openings in the building.

The installation location must not be exposed to ammonia, corrosive vapours, salts or acids.

Installation notes

Selecting wall plugs and screws

IMPORTANT!

Different fixings may be required to fit the mounting bracket depending on the type of underlying surface.



Fixings are therefore not included in the scope of supply of the inverter. The installer is responsible for selecting the right type of fixing.

Recommended screws


To install the inverter, the manufacturer recommends the use of steel or aluminium screws with a diameter of 6 - 8 mm.

Fitting the wall bracket

When mounting the wall bracket, ensure that the wall bracket is not warped or deformed.

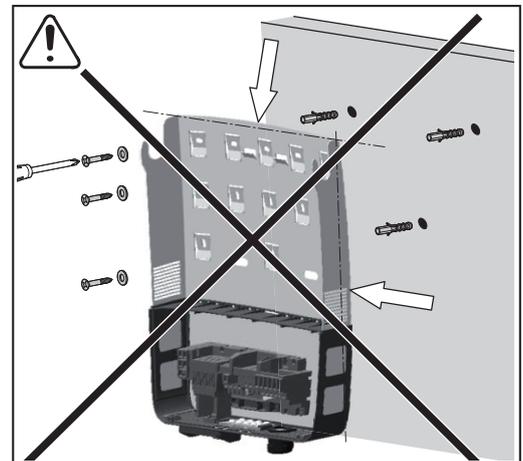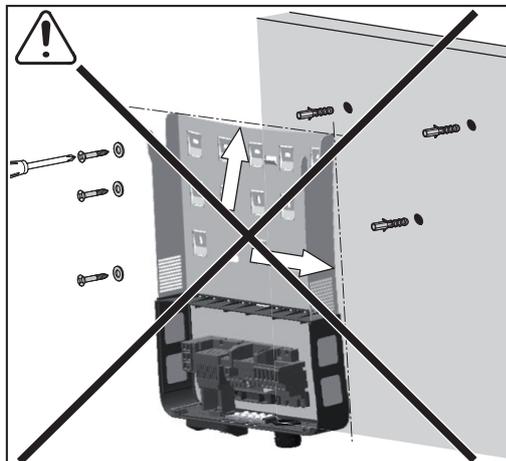

Mounting the inverter on a mast

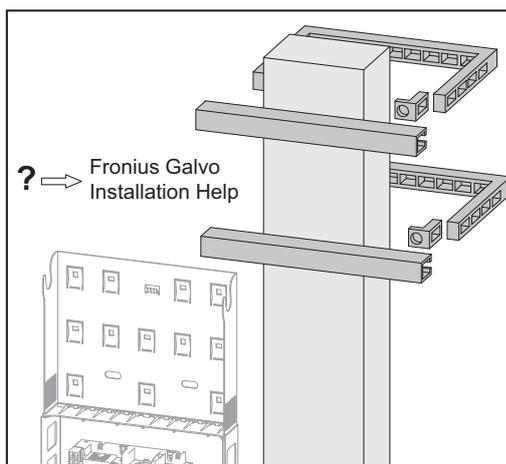

Example of a mast fixing kit

When mounting the inverter on a mast or a vertical carrier, Fronius recommends the use of a standard mast fixing kit.


This kit enables the inverter to be mounted on round or rectangular masts with various cross-sections.

Notes regarding grid connection

Monitoring the grid

To provide the best possible grid monitoring, the resistance in the leads to the AC-side terminals should be as low as possible.

AC terminals

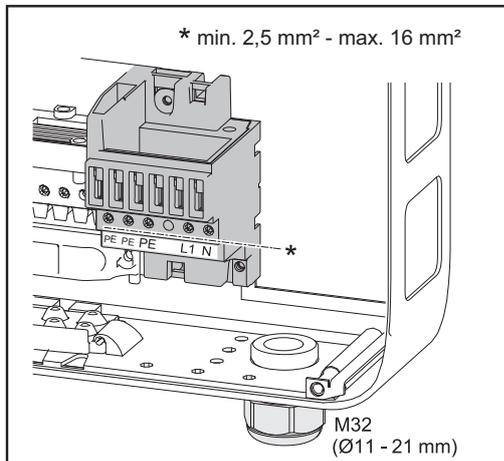

- PE Ground conductor / grounding
- L1 Phase conductor
- N Neutral conductor

Max. cross-section of each conductor cable:
16 mm²

Min. cross-section of each conductor cable:
in accordance with the fuse rating on the AC side, but at least 2.5 mm²

The AC cables can be connected to the AC terminals without ferrules.

IMPORTANT! When using ferrules for AC cables with a cross-section of 16 mm², the ferrules must be crimped with a right-angled cross-section. The use of ferrules with insulating collars is only permitted up to a max. cable cross-section of 10 mm².

Type of AC cable

The following types of AC cable can be connected to the AC terminals of the inverter:

-   - copper or aluminium: round, single wire
-  - Copper: round, finely stranded up to conductor category 4

Preparing the aluminium cables for connection

The AC-side terminals are suitable for connecting single-wire, round aluminium cables. Because of the formation of a non-conductive oxide layer due to the reaction of aluminium with air, the following points must be considered when connecting aluminium cables:

- the reduced rated currents for aluminium cables
- the connection conditions listed below

Always follow the cable manufacturer instructions when using aluminium cables.

When designing cable cross-sections, take local regulations into account.

Connection conditions:

- 1** Carefully clean the oxide layer from the bare end of the cable by scraping it, e.g. with a knife

IMPORTANT! Do not use brushes, files or emery paper, as the aluminium particles get trapped and can be transferred to other conductors.

- 2** Once the oxide layer is removed, rub the end of the cable with a neutral grease, such as non-acidic and non-alkaline Vaseline

- 3 Immediately connect the cable end to the terminal

IMPORTANT! Repeat the procedure if the cable has been disconnected and is to be re-connected.

Grid connection of inverter or dummy device



IMPORTANT! To ensure a proper ground connection, all three PE grounding terminals must be tightened to the specified torque when the inverter is installed.

IMPORTANT! Form loops with the AC cables when connecting them to the AC terminals. When securing the AC cables using a metric screw joint, ensure that the loops do not protrude beyond the connection area. Otherwise, under certain circumstances it may no longer be possible to close the inverter.

IMPORTANT!


- Ensure that the grid neutral conductor is grounded. This may not be the case for IT grids (insulated grids with no grounding); it will then not be possible to use the inverter.
- In order to use the inverter, the neutral conductor must be connected.
A neutral conductor that is too small may adversely affect the grid power feed operation of the inverter. The neutral conductor must therefore be the same size as the other live conductors.

IMPORTANT! The PE ground conductor of the AC cable must be laid in such a way that it is the last to be disconnected in the event that the strain-relief device should fail. This can be ensured, for example, by making it somewhat longer and by laying it in a loop.

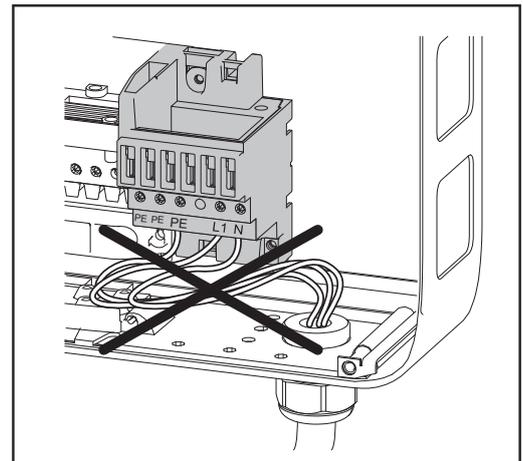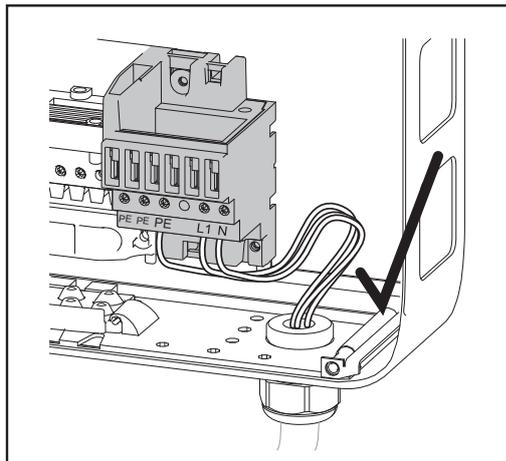


If AC cables are laid over the shaft of the DC main switch or across the connection block of the DC main switch, they may be damaged when the inverter is swung in, or they may even prevent the inverter from being swung in.

IMPORTANT! Do not lay AC cables over the shaft of the DC main switch or across the connection block of the DC main switch.

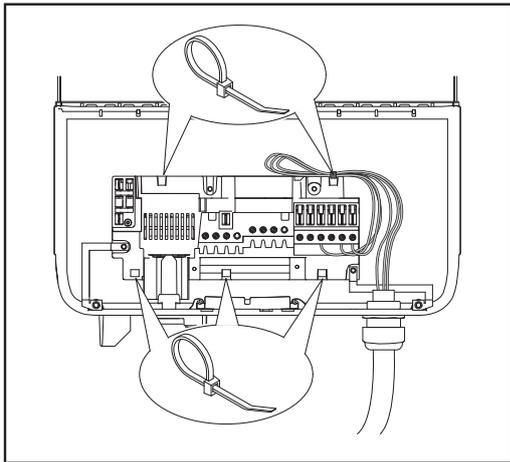


If overlength AC or DC cables are to be laid in loops in the connection area, attach the cables with cable ties to the eyelets provided on the top and bottom of the connection block.

Maximum fuse rating on alternating current side

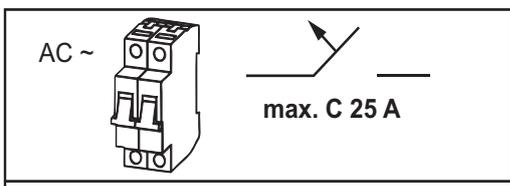

Inverter	Phases	Max. output	Max. fuse rating
Fronius Galvo 1.5	1	1500 W	1 x C 25 A
Fronius Galvo 2.0	1	2000 W	1 x C 25 A
Fronius Galvo 2.5	1	2500 W	1 x C 25 A
Fronius Galvo 3.0	1	3000 W	1 x C 25 A
Fronius Galvo 3.1	1	3100 W	1 x C 25 A

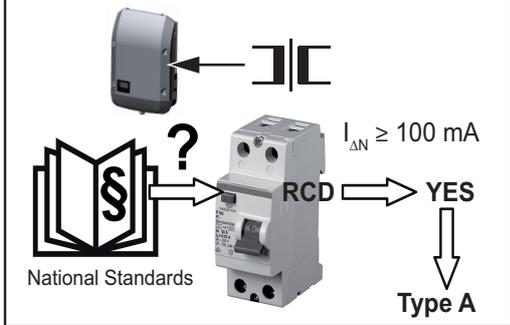

NOTE!

Local regulations, the energy supply company or other factors may require a residual current protective device (RCD) in the AC connection lead.
 For this situation, a type A residual-current circuit breaker is generally adequate. However, in certain circumstances, and depending on local factors, the type A residual-current circuit breaker may trip at the wrong time.
 For this reason, Fronius recommends that a residual-current circuit breaker that is suitable for frequency converters should be used.

Notes regarding DC connection

General information about solar modules

In order to select suitable solar modules and get the most efficient use out of the inverter, please note the following points:

- The open circuit voltage of the solar modules increases as the temperature decreases (assuming constant irradiance). Open circuit voltage may not exceed the following values:
Fronius Galvo 1.5-1 ... 420 V
Fronius Galvo 2.0-1 ... 420 V
Fronius Galvo 2.5-1 ... 550 V
Fronius Galvo 3.0-1 ... 550 V
Fronius Galvo 3.1-1 ... 550 V

If the open circuit voltage exceeds the above mentioned values, the inverter may be damaged, and all warranty rights will become null and void.


- Note the temperature coefficients in the solar module data sheet
- More exact data for sizing the solar array for the particular location can be obtained using calculations tools such as the Fronius Solar.configurator (available at <http://www.fronius.com>).

NOTE!

Before connecting solar modules, make sure that the voltage specified by the manufacturer corresponds to the actual measured voltage.

Note the safety instructions and specifications of the solar module manufacturer regarding solar module grounding.


DC terminals

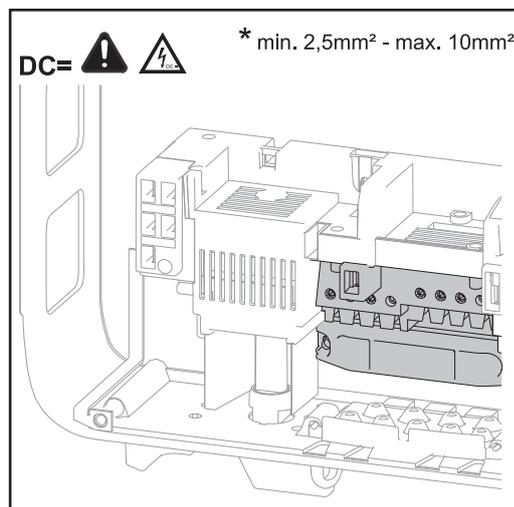

Max. cross-section of each DC cable:
16 mm²

Min. cross-section of each DC cable:
2.5 mm²

The DC cables can be connected to the DC terminals without ferrules.

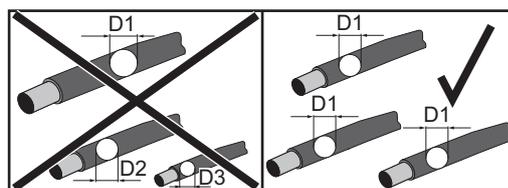

NOTE!

To ensure effective strain relief of the solar module strings, only use cables with identical cross-sections.

IMPORTANT! When using ferrules for DC cables with a cross-section of 16 mm², the ferrules must be crimped with a right-angled cross-section.
The use of ferrules with insulating collars is only permitted up to a max. cable cross-section of 10 mm².

Connecting aluminium cables

The DC-side terminals are suitable for connecting single-wire, round aluminium cables. Because of the formation of a non-conductive oxide layer due to the reaction of aluminium with air, the following points must be considered when connecting aluminium cables:

- the reduced rated currents for aluminium cables
- the connection conditions listed below

NOTE!

Always follow the cable manufacturer instructions when using aluminium cables.

NOTE!

When designing cable cross-sections, take local regulations into account.

Connection conditions:

1 Carefully clean the oxide layer from the bare end of the cable by scraping it, e.g. with a knife

IMPORTANT! Do not use brushes, files or emery paper, as the aluminium particles get trapped and can be transferred to other conductors.

2 Once the oxide layer is removed, rub the end of the cable with a neutral grease, such as non-acidic and non-alkaline Vaseline

3 Immediately connect the cable end to the terminal

IMPORTANT!

Repeat the procedure if the cable has been disconnected and is to be re-connected.

Notes regarding dummy devices

A dummy device is not suitable for connecting operationally to a photovoltaic system, and must only ever be used for demonstration purposes. Dummy devices are indicated as such on their rating plate.

IMPORTANT! Never connect DC cables to the DC connection sockets on a dummy device.


The connection of de-energised cables or sections of cable for demonstration purposes is permissible.

Inverter DC connection

Only break out as many target break points as the number of cables that are provided (e.g. if there are two DC cables, then break out two recesses).

IMPORTANT! Check the polarity and voltage of the solar module strings: the permitted voltage is:

- Max. 420 V
for Fronius Galvo 1.5-1
for Fronius Galvo 2.0-1
- Max. 550 V
for Fronius Galvo 2.5-1
for Fronius Galvo 3.0-1
for Fronius Galvo 3.1-1

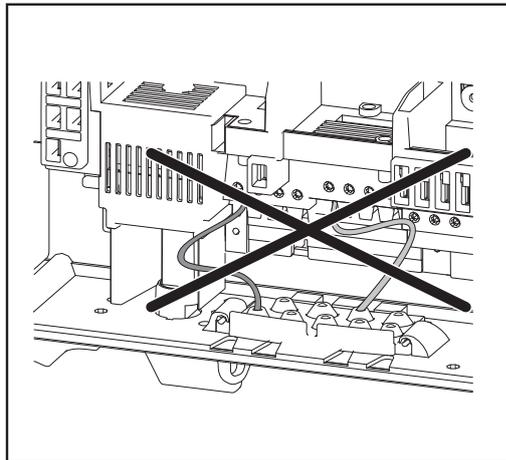


If DC cables are laid over the shaft of the DC main switch or across the connection block of the DC main switch, they may be damaged when the inverter is swung in or they may even prevent the inverter from being swung in.


IMPORTANT! Do not lay DC cables over the shaft of the DC main switch or across the connection block of the DC main switch.

Notes regarding the solar module ground in the inverter

General remarks

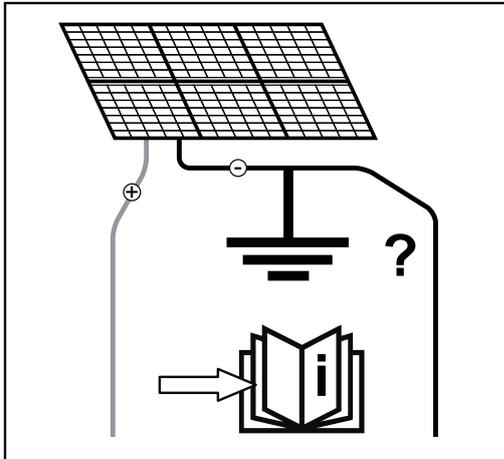

Some manufacturers of solar modules stipulate that the modules must be grounded.

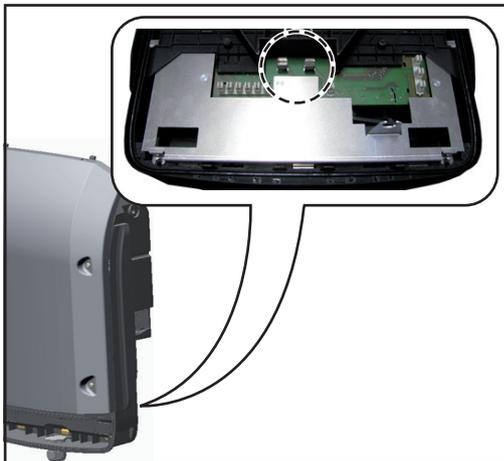

Inside the inverter is a means for grounding solar modules to the negative pole via a fuse.

The fuse holder for grounding the solar modules is located on the rear of the inverter.


The inverter can also be operated with solar modules that need to be grounded to the positive pole.

IMPORTANT! The fuse in the inverter is not used for grounding the solar modules to the positive pole; this has to take place outside the inverter.

Fuse holder for solar module ground on the negative pole

Solar Module Ground at Negative Pole with Fuse

Solar module ground at negative pole with fuse

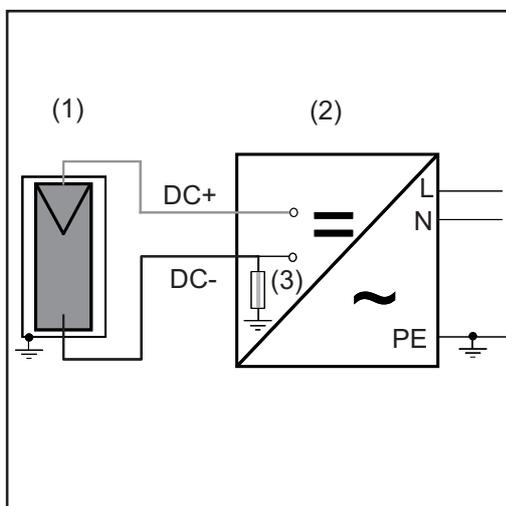

- (1) Solar module
- (2) Inverter
- (3) Fuse

For solar module grounding at the negative pole Fronius recommends following fuse:
nominal current 1A / 600 V, fuse size 10 x 38 mm

IMPORTANT! Fuses for solar module grounding are not included with the inverter. If a solar module grounding is required by the solar module manufacturer, a suitable fuse has to be ordered separately.


Configuring the inverter for grounded solar modules

The inverter's insulation monitoring must be deactivated when the solar modules are grounded. In the Basic menu, the inverter must therefore be configured so that when the grounding fuse trips, an error message is displayed or the inverter is switched off (according to the country setup).

The access code 22742 must be entered to access the Basic menu.

Notes regarding the laying of data communication cables

Laying data communication cables

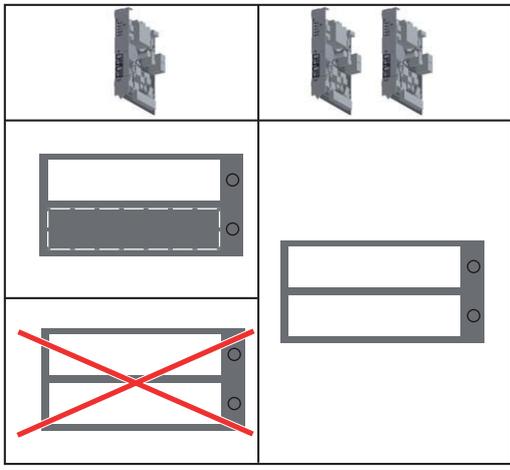

IMPORTANT! Operating the inverter with one option card and two broken-out option card slots is not permitted. To cater for this eventuality, a suitable blanking cover (42,0405,2020) is available from Fronius as an option.

IMPORTANT! Note the following if data communication cables are being introduced into the inverter:

- depending on the number and cross-section of the data communication cables that are being introduced, take the relevant blanking plugs out of the sealing insert and insert the data communication cables.
- the relevant blanking plugs must be inserted into the free openings on the sealing insert.

Notes regarding attaching the inverter to the wall bracket

Attaching the inverter to the wall bracket

The side sections of the housing lid are designed to function as holding and carrying handles.

NOTE!

For safety reasons, the inverter is fitted with a latch that prevents the inverter from being swung into the wall bracket unless the DC main switch is switched off.

- ▶ Never attach the inverter to the wall bracket or swing it in unless the DC main switch is switched off,
 - ▶ Never use force to attach the inverter or swing it in.
-

The fastening screws in the data communication area of the inverter are used for securing the inverter to the wall bracket. Correctly tightened fastening screws are a prerequisite if proper contact is to be established between inverter and wall bracket.


CAUTION!

If the fastening screws are not tightened correctly, then the inverter is at risk of being damaged.

Fastening screws that are not correctly tightened can result in arcs occurring when the inverter is in operation, which in turn can cause fires. Always use the specified torque when tightening the fastening screws.

Notes regarding software updates

Notes regarding software updates

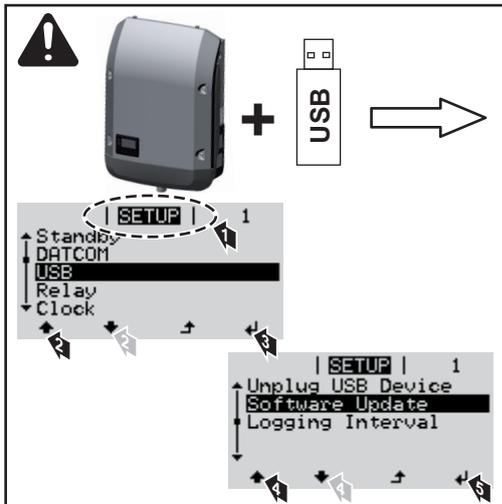

If the inverter is supplied with a USB stick, the inverter software must be updated as soon as the inverter has been commissioned:

- 1 Plug the USB stick into the data communication area of the inverter
- 2 Open the Setup menu
- 3 Select the "USB" menu item
- 4 Select "Software Update"
- 5 Update the software

USB Stick as a Data Logger and for Updating Inverter Software

USB flash drive as a datalogger

If a USB flash drive is connected to the USB A socket it can function as a datalogger for an inverter.

The logging data stored on the USB flash drive can be viewed at any time in third-party programmes (e.g Microsoft® Excel) using the CSV file logged at the same time.


Older versions of Excel (before Excel 2007) are limited to a maximum of 65,536 rows.

Data on the USB stick

If the USB stick is being used as a data logger, three files will be created automatically:

- FRONIUS.sys system file:
This file stores information from the inverter that is irrelevant to the customer. The file must not be deleted separately. Only delete all of the files (sys, fld, csv) at one time.
- DALO.fld log file:
A log file for reading the data in the Fronius Solar.access software.

Further details on the Fronius Solar.access software can be found in the "DATCOM Details" operating instructions at <http://www.fronius.com>
- DATA.csv log file:
A log file for reading the data in a spreadsheet program (e.g.: Microsoft® Excel)

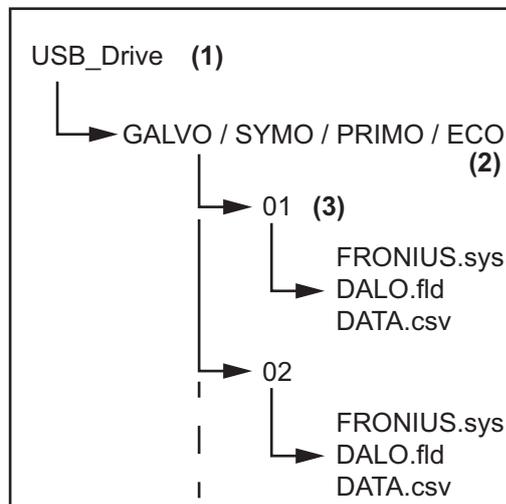

- (1) USB root directory
- (2) Fronius inverters (Fronius Galvo, Fronius Symo, Fronius Primo or Fronius Eco)
- (3) Inverter number - can be set in the Setup menu under DATCOM

If there are several inverters with the same inverter number, the three files will be saved in the same folder. A digit is added to the file name as a suffix (e.g.: DALO_02.fld)

Data structure on the USB stick

Structure of the CSV file:

	(1)	(2)	(3)	(4)	(5)	(6)	(7)	
	A	B	C	D	E	F	G	H
1	SerialNr.:123456789987456321'							
2	Date	Time	Inverter No.	Device Type	Periode [s]	Energy [Ws]	Energy L[Var]	Energy C[Var]
3	30.03.2013	17:15:19	1	247				
4	30.03.2013	17:15:19	1	247				
5	30.03.2013	17:15:19	1	247				
6	30.03.2013	17:15:20	1	247				

I	J	K	L	M	N	O	P	Q	R	S
Uac L1 [V]	Uac L2 [V]	Uac L3 [V]	Iac L1 [A]	Iac L2 [A]	Iac L3 [A]	Udc S1[V]	Idc S1[A]	Description		
								Display Information		
								V0.1.5 Build 0		
								28.03.2013 23:59:49 Info 017, Counter 0092		
								Logging Start		

- (1) ID
- (2) Inverter no.
- (3) Inverter type (DATCOM code)
- (4) Logging interval in seconds
- (5) Energy in watts per second, relative to the logging interval
- (6) Inductive reactive power
- (7) Capacitive reactive power
- (8) Average values during the logging interval (AC voltage, AC current, DC voltage, DC current)
- (9) Additional information

Data volume and storage capacity

A USB stick with a storage capacity of 1 GB can record logging data for roughly seven years at a logging interval of five minutes.

CSV file

CSV files can only store 65,535 lines (data records) (up to Microsoft® Excel 2007; there is no restriction from this version onwards).

At a five-minute logging interval, the 65,535 lines will be written within approximately seven months (CSV data size of approx. 8 MB).

In order to avoid data loss, the CSV file should be backed up to a PC and deleted from the USB stick within this seven-month period. If the logging interval is set to a longer period, this time frame will be increased accordingly.

FLD file

The FLD file should not be bigger than 16 MB. This will provide enough storage capacity for approximately six years at a logging interval of five minutes.

If the file exceeds the 16 MB limit, it should be backed up to a PC and all of the data on the USB stick should be deleted.

After backing up and removing the data, the USB stick can be reconnected immediately to resume recording the logging data without any further steps being required.

NOTE!

Using a full USB stick can lead to data loss or data being overwritten.

When using USB sticks, always ensure that there is sufficient storage capacity on the stick.

Buffer memory

If the USB stick is unplugged (e.g. for data backup purposes), the logging data is written to a buffer memory in the inverter.

As soon as the USB stick is plugged in again, the data is copied automatically from the buffer memory to the stick.

The buffer memory can store a maximum of six logging points. Data is only logged while the inverter is running (output greater than 0 W). The logging interval is permanently set at 30 minutes. Data can be recorded on the buffer memory for a three-hour time period as a result.

When the buffer memory is full, the oldest data in the memory will be overwritten by the next batch of data.

IMPORTANT! The buffer memory requires a permanent power supply.

If there is a power failure while the inverter is in operation, all the data in the buffer memory will be lost. To avoid losing data during the night, the automatic night switch-off facility must be deactivated (switch the "Night Mode" setup parameter to ON - see the Datamanager 2.0 Operating Instructions, section "Setting and displaying the menu items", "Viewing and adjusting parameters in the DATCOM menu item").

On the Fronius Eco or Fronius Symo 15.0-3 208, the buffer memory also functions with just a DC supply.

Suitable USB flash drives

Due to the variety of USB flash drives available on the market, it cannot be guaranteed that every USB flash drive will be detected by the inverter.


Fronius recommends that only certified USB flash drives suitable for building sites are used (look out for the USB-IF logo).

The inverter supports USB flash drives with the following file systems:

- FAT12
- FAT16
- FAT32

Fronius recommends that the USB flash drives employed should only be used for recording logging data or updating the inverter software. The USB flash drives should not contain any other data.

USB symbol on the inverter display, e.g. in display mode 'NOW':

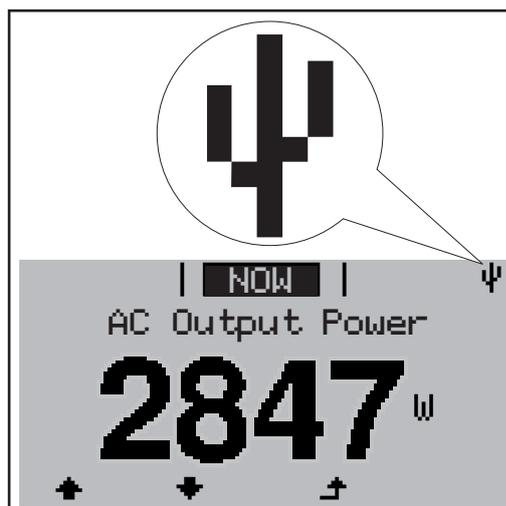

If the inverter detects a USB flash drive, the USB symbol will appear in the top right corner of the display.

When inserting a USB flash drive, check whether the USB symbol is displayed (it may also flash).

NOTE!

Please note for outdoor applications that conventional USB flash drives are often only guaranteed to work within a restricted temperature range.


For outdoor applications ensure that the USB flash drive also functions, for example, at low temperatures.

USB stick for updating the inverter software

With the help of the USB stick, end customers can also update the inverter software via the USB item on the SETUP menu: the update file is first saved to the USB stick, from where it is then transferred to the inverter. The update file must be saved in the root directory on the USB stick.

Remove USB stick

Security note concerning the removal of a USB stick:

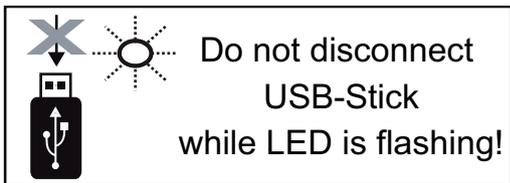

IMPORTANT! To avoid any loss of data, a USB stick may only be removed if the following conditions are met:

- only remove a USB stick via the 'Safely remove USB / HW' item on the SETUP menu
- the 'Data transmission' LED has stopped flashing or comes on steady.

Notes regarding maintenance

Maintenance

NOTE!

**When installed outdoors in a horizontal position:
once a year, check that all screw joints are tight!**

Maintenance and servicing may only be carried out by Fronius-trained service technicians.

Cleaning

Clean the inverter as required with a damp cloth.
Do not use cleaning agents, abrasives solvents or similar to clean the inverter.

Serial Number Sticker for Customer Use

Serial number sticker for customer use



The serial number of the inverter is located on the rating plate on the bottom of the inverter. Depending on the installation position of the inverter, the serial number can be difficult to access or read, e.g. if the inverter has been installed in a dark or shaded area.



Two serial number stickers are enclosed with the inverter's Installation Instructions:

- * 57 x 20 mm
- ** 67 x 20 mm

These can be affixed by the customer in a visible location of his choosing, e.g. on the front of the inverter or on the Operating Instructions.

Application example

* Serial Number Sticker for Customer Use, 57 x 20 mm

** DRMs for **Australia** for Customer Use, 67 x 20 mm

Application example:
Serial number sticker on the Operating Instructions or on the front of the inverter

For Australia only:
Affix the DRM Australia sticker in the Data-manager area.

FRONIUS INTERNATIONAL GMBH

Vorchdorfer Straße 40, A-4643 Pettenbach, Austria

E-Mail: sales@fronius.com

www.fronius.com

Under www.fronius.com/contact you will find the addresses
of all Fronius Sales & Service Partners and locations